


Motion Activated Camera MAC200

version EN A1


Firmware Upgrade Procedure

Before doing firmware upgrade process, please follow below steps and unzip the firmware upgrade package.

Step 1 Ensure your camera is powered down and remove SD card from the camera.
Then insert the SD card into your computer.

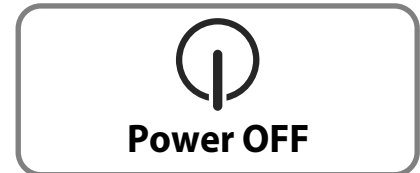

Step 2 Copy and save the file **MAC200FW.BIN** into **200MAC00** folder in the SD card (200MAC00 folder should locate in the **DCIM** folder)
**** If your SD card doesn't have a folder named 200MAC00 in the DCIM folder, please create those folders by yourself!**

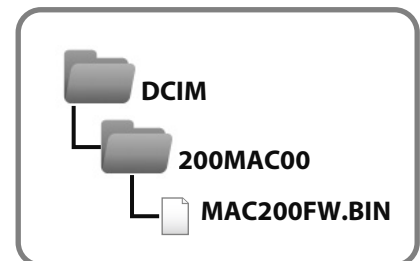

Step 3 Insert the SD card into the camera.



Step 4 Power on the camera.



Step 5 After the upgrade tool has fully loaded, you will see an Updating Warning message on LCD screen, it means that the camera is updating firmware. Please do not power off the camera when you see the warning!! Just wait until the upgrade is completed!



Done Once completed the upgrade, verify your new version to make sure the upgrade was successfully completed.



Please do not **TURN OFF power or **REMOVE** SD card when camera is updating firmware as that will damage the camera!**