Brinno Lens


18-55mm F1.2

User Manual

Aspherical

brínno

1. Package contents



- 1 Brinno Lens 18-55 mm F1.4 (BCS 24-70) x 1
- 2 Lens Bag x 1
- (3) IR Filter x 1
- 4 IR Filter case x 1
- 5) User manual x 1

2. Parts of device

Brinno Lens



IR Filter

- ① Top cover
- 3 Zoom
- ② Bottom cover ④ Aperture
 - ⑤ Focus
- ① Glass
- ② Driving Holes

3. Installation

3-1 To remove the current lens kit(BCS 019) from TLC200 Pro







a. Turn TLC200 Pro face down to the floor to protect against dust getting on the sensor. *b.* Rotate counter-clockwise to unlock the BCS 019.

3-2 To install the IR Filter on the TLC200 Pro

a.







C





- a. Rotate lens upwards, then place the IR filter horizontally.
 b. Screw in IR filter with fingers.
 c. Insert the screwdriver* from TLC200 Pro into one of the driving holes, turn clockwise until tight.
- * For more information, please refer to the TLC200 Pro manual page 5(Package Content).



IR Filter works with BCS 019, BCS 18-55 and BCS 24-70. It's recommended to keep IR Filter on TLC200 Pro.

3. Installation

3-3 To install Brinno Lens (BCS 18-55) on TLC200 Pro



Remove the bottom lens cover and turn the BCS 18-55 clockwise to install the lens on the TLC 200 Pro.





Be careful when using different lens, the TLC200 Pro may tip over due to the gravity center shift especially without battries.

4. Focus Adjustment








Go to the "Focus" menu (Time Lapse Camera TLC200 Pro), see the enlarge preview screen. Rotate the lens to focus object.



For more information, please refer to TLC200 Pro manual page 16.

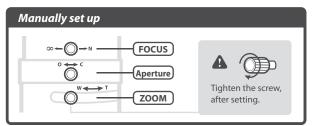

5. Specification

MODEL BCS 18-55

MOUNT TYPE CS-mount

FOCAL LENGTH 18-55 mm

APERTURE F1.2 ~ 1.9

ANGLE OF VIEW 113 ~ 48°

FOCUS DISTANCE Tele 1cm ~ ∞

Wide 35cm ~ ∞

SIZE Ø43 x 55 mm

WEIGHT 66 a

To Insure Long Term Use



DUST







FINGERPRINT

Avoid to storing the lens in high-temperature, high-humidity locations.

Thank you for purchasing Brinno Time Lapse Camera Accessories! If you have any questions or problems setting up your Brinno TimeLapse Camera please contact the sales staff where you purchased our product or email us at

Brinno Incorporated directly: customerservice@brinno.com



7F, No.75, Zhou Zi St., Taipei City 11493, Taiwan Phone:+886-2-8751-0306 Fax:+886-2-8751-0549 customerservice@brinno.com

301-0064-00 (EN A1)