




# Pan Lapse


Quick Start Guide

brinno

## Parts of Pan Lapse

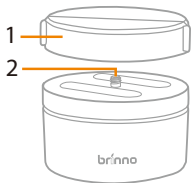


1. Smartphone Clamp
2. Tripod Mount for Camera
3. Tripod Mount

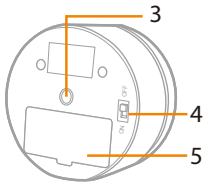


4. Power ON/OFF Switch
5. Battery Cover

### Status LED Indicator



6. Red: Battery Low
7. Green: Power On  
Non-Stop Rotating  
Green Light Blink: Time Lapse working
8. Blue: Bluetooth Connecting

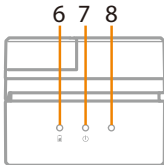



## Power On

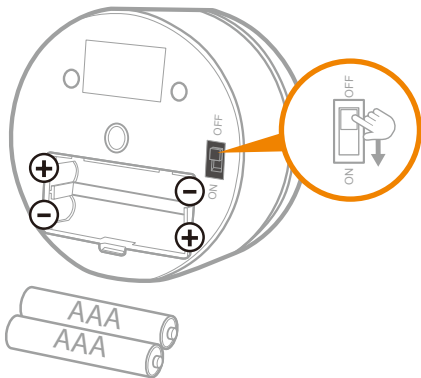

## Smartphone Clamp

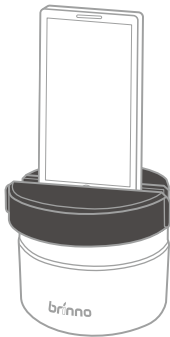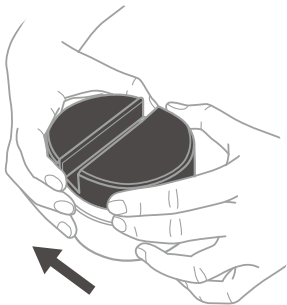

## Camera Tripod Mount

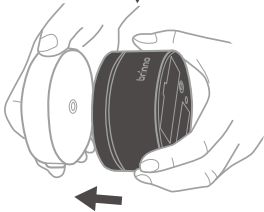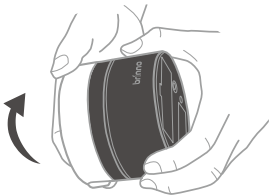

# Caution



# Installing Brinno Pan Lapse APP on your smartphone



For more information please go to:  
[www.brinno.com/art200](http://www.brinno.com/art200)



# Brinno APP


1

Open APP



2

Turn on Bluetooth

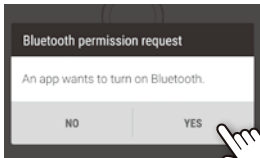

\* Only in the status of your smartphone bluetooth off , the asking screen will pop up when open app.



3



1. Scan Device
2. Select **Brinno\***



\* You may rename your device. ( Six characters limited)

# Setting


1. Set Speed  
1: Slow  
10: Fast  
 $\infty$ : Non Stop(Fastest)
2. Set Time Interval  
(This time interval should match the setting on your time lapse camera.)
3. Set Panning Angle  
(Back-and-forth sweeping)
4. Press "OK"
5. Choose Direction and Start

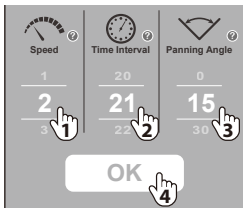

## Tip-1


### Video Recording:

When Speed Setting is " $\infty$ " with time interval " $0$ ",  
Pan Lapse will Non-Stop Rotating.

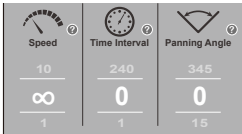


### Time Lapse Recording:

Speed setting should not be " $\infty$ ".  
Time Interval setting should not be " $0$ ".

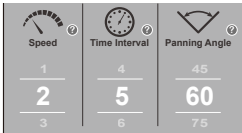

## Tip-2

### How To Set Perfect Panning Angle?

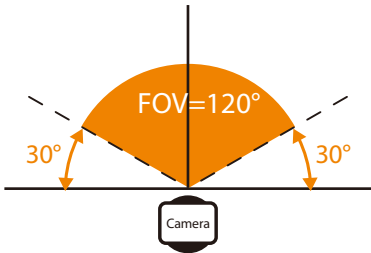

#### **Ex:**

If camera Fov=120°

Plan to shoot a 180° panning time lapse

Panning angle =  $180^\circ - 120^\circ = 60^\circ$

## Tip-3

### What setting should I use?

<b>Status (Time Lapse)</b>	<b>Speed</b>	<b>Time Interval</b>	<b>Panning Angle</b>
<b>Scenery</b>	3-5	3-5	On demand
<b>Party</b>	7	1	345°

<b>Status</b>	<b>Speed</b>	<b>Time Interval</b>	<b>Panning Angle</b>
<b>Video</b>	∞	0	On demand

**brinno**

301-0084-00 EN A1